

TRUSTED FOR OVER  
100 YEARS

SFH436-CN

# Digital Bathroom Heater

*Sunbeam*®



 
## Instruction Leaflet

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

# PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the appliance.
2. To avoid fire or shock hazard, plug the appliance directly into a 120V AC electrical outlet.
3. The heater is hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 ft (0.9 m) from the front of the heater and keep them away from the sides and rear.
4. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
5. Extreme caution is necessary when any heater is used by, or near children or invalids, and whenever the heater is left operating and unattended.
6. Always unplug the heater when not in use.
7. When unplugging, be sure to pull by the plug and not the cord.
8. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
9. DO NOT operate heater with a damaged cord or plug, or after the heater malfunctions, has been dropped or damaged in any manner. Return appliance to manufacturer for examination, electrical or mechanical adjustment, or repair.
10. A heater has hot and arcing or sparking parts inside. DO NOT use it in areas where gasoline, paint, or flammable liquids are used or stored.
11. Use appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by the manufacturer may cause hazards.
12. DO NOT use outdoors.
13. To prevent a possible fire, DO NOT block air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
14. To disconnect heater, turn controls to OFF, then remove plug from outlet.
15. This heater is not intended for use with an extension cord. Plug the cord directly into an appropriate wall receptacle.
16. If the heater will not operate, see specific instructions on Auto Safety Shut-off.
17. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.
18. Discontinue use if plug or outlet is hot. It is recommended that the outlet be replaced if plug or outlet is hot to touch.
19. The heater must not be located immediately below a socket-outlet. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

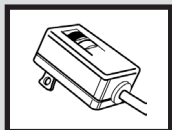

**ALCI (Appliance Leakage Current Interrupter) SAFETY DEVICE:** This device provides protection against electric shock due to ground fault currents by automatically shutting off the power. To test the operation of the ALCI Safety Device, switch the heater ON. Press the TEST button on the ALCI device attached to the plug end of the line cord. The heater and fan should stop operating and the Power light should be extinguished. Press the RESET button on the ALCI device to resume normal operation of the heater. This device should not be used on ON/OFF operation switch.

**CAUTION:** ALTHOUGH THIS DEVICE IS PROVIDED WITH PROTECTION WHICH REDUCES THE RISK OF ELECTRIC SHOCK, THIS PRODUCT SHOULD NEVER BE USED CARELESSLY NEAR WATER.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

# FEATURES - OPERATIONS

## PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

### TECHNICAL SPECIFICATIONS

 
- Amps: 12.5
- Wattage: 1500 W (+5 % -10 %)
- Working voltage: 120 V AC/60Hz

### WALL MOUNT INSTALLATION INSTRUCTIONS

Your heater comes fully assembled and ready for immediate use. This heater also comes with a Wall Mount Bracket which allows you to mount the heater on wall.

#### Wall Mount Installation:

1. Carefully remove your heater and the Wall Mount Bracket from the box.
2. Secure the mounting bracket to the wall as shown. (See Figure 1)

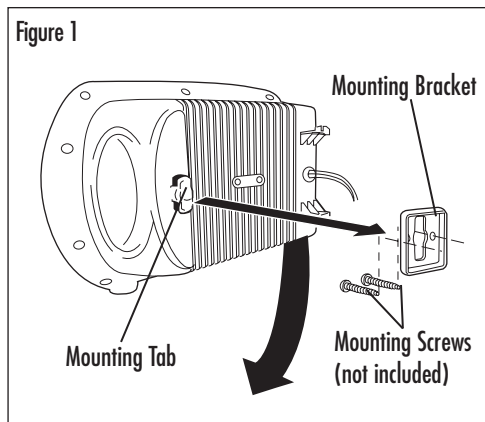

3. Turn heater sideways and position the mounting tab on the back of the heater so it lines up with the mounting bracket.
4. Place mounting tab into the mounting bracket and rotate heater into the upright position to lock it in place.

**Please Note:** Due to the multitude of potential mounting surfaces, mounting screws are not included with this product. Please visit your local hardware store to determine which type of screw is best for your particular wall.

### OPERATING INSTRUCTIONS

1. Place heater on firm level surface.
2. Avoid overloading your circuit by not using other high wattage appliances in the same outlet.

Your heater is equipped with a digital thermostat that allows you to set your heater to your precise comfort level:

#### ⏻ Power On/Off

**NOTE:** Once the time is set; the power ring is the only indicator that the unit is off and that the mode button will not function.


 

 

Press the **Power** Button to turn on the heater. LCD Display and Power Light Ring will illuminate. The LCD Display will show the current clock time and the Thermostat icon (🌡️).

#### Mode Settings

 
Press the **Mode** Button to select your desired settings, the LCD Display will cycle through to show the below settings in sequence:

1. 🌡️ **Thermostat:**  
The Thermostat icon (🌡️) and the current clock time will appear on the LCD Display. Turn the Thermostat Control to adjust the temperature level ranging from 18°C to 29°C. When the preset temperature is reached, the heater will shut off until the room temperature drops below the preset temperature, the heater will be switched on again to maintain the room at the preset temperature level.




# FEATURES - OPERATIONS

-   **Fan Only Setting:**  
 The Fan icon (  ) and the current clock time will appear on the LCD Display. The heater will run continuously without heat output.
  - Stay On**  Setting:  
 "Stay On" and the current clock time will appear on the LCD Display. The heater will run continuously at 1500W. To shut off the heater, you must press the Power Button (  ) to turn the Power Light Ring off.
- NOTE:** It is normal for the heater to cycle on and off as to maintain the preset temperature. To prevent the heater from cycling, you need to raise the thermostat setting.

**NOTE:** When the preset temperature is reached or when the heater is shut off, the fan will run for 10 seconds without heat. This cool down process ensures an accurate and consistent temperature reading.

**NOTE:** To shut the heater off at any time, press the Power (  ) Button. The digital thermostat has memory, it will remember the last temperature setting before the heater is turned off. However, if the heater is unplugged, the digital thermostat will no longer remember the previous temperature setting, you have to reset the digital thermostat following the above instructions.

## **Clock - Set current Time**

- To program the heater to turn ON at a preset time, you must set the current time first, press and hold the **Clock** Button (  ) for 3 seconds.
- The hour digits on LCD Display will blink. Turn the Thermostat Control to adjust from 12 to 1, and switching between **AM** and **PM**.
- Press the **Clock** Button (  ) again until the minute digits blink. Turn the Thermostat Control to adjust from 00 to 59.
- Press the **Clock** Button (  ) again to confirm the current time is set on heater.

## **Start Time - Set Timer to turn heater ON**

- The **Start Time** button allows user to program the heater to turn ON at a preset time. The unit turns on in the "Stay On" setting and cannot be changed without powering the unit off. The heater will turn OFF automatically after 30 minutes.
 


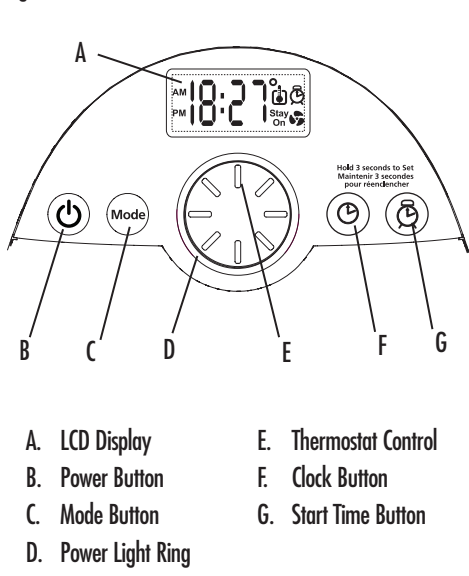 



 

**NOTE:** Timer can be set in any mode but will not engage if the unit is in an active mode (fan, stay on, therm).
- To preset time, press and hold the **Start Time** Button (  ) for 3 seconds.
- The hour digits on LCD Display will blink. Turn the Thermostat Control to adjust from 12 to 1, and switching between **AM** and **PM**.

 Figure 2: **CONTROL PANEL**



# CLEANING / MAINTENANCE

## AUTO SAFETY SHUT OFF

4. Press the **Start Time** Button until the minute digits blink. Turn the Thermostat Control to adjust from **00** to **59**.
5. Press the **Start Time** (  ) Button again to set the preset time.
6. Press and hold the **Start Time** Button (  ) to activate the Timer feature. The icon (  ) and the current clock time will appear on the LCD Display to confirm the Timer feature being activated.
7. To turn off the Timer feature, press and hold the **Start Time** Button (  ) again until the icon (  ) goes off.

**NOTE:** Modes cannot be changed without powering down the unit once the timer has been engaged.

**NOTE:** The Timer has memory to store the preset time, but you must re-activate the Start Time feature again to program the heater repeatedly at your preset time. For example, if you want your heater to pre-heat the room at a preset time every morning, you must press and activate the Start Time button every night before you go to sleep.

### AUTO SAFETY SHUT-OFF

This heater is equipped with a patented, technologically advanced, safety system that requires the user to reset the heater if there is a potential overheat situation. When a potential overheat temperature is reached, the system will automatically shut the heater off. It can only resume operation when the user resets the unit.

#### To Reset the Heater :

1. Unplug the heater and wait 30 minutes for the heater to cool down.
2. After 30 minutes, plug the heater in again and operate normally.

## CLEANING/MAINTENANCE

Always unplug the heater before cleaning and allow the heater to cool down.

1. Clean the unit with a soft cloth moistened with a mild soap solution.
2. NEVER use abrasive or flammable solvents to clean the unit.
3. After cleaning, be sure to completely dry the unit with a cloth or towel.
4. Store heater in a cool, dry location.
5. The manufacturer recommends that you store the unit in its original carton.

# TROUBLESHOOTING

## TROUBLESHOOTING

If your heater fails to operate:

- Make sure the electrical outlet or circuit breaker is working.
- Check for obstructions. If you find an obstruction turn the heater OFF, and unplug the unit. Carefully remove the obstruction and follow the reset instructions.
- Make sure the switch on the ALCI plug is in the RESET position.
- The temperature may be set too low. Turn the Thermostat Control to a higher temperature level until the heater restarts.
- Make sure to follow the OPERATING INSTRUCTIONS to turn on the heater and set the digital thermostat to your precise comfort level.
- Timer has elapsed. Start Time mode will automatically turn OFF after 30 minutes.
- Press the power button so that power light ring illuminates.
- Once the clock is set, only the power ring signifies that the heater buttons (other than the power button) can be used.

**Please DO NOT attempt to open or repair the heater.**

**Please see the Warranty for Service Instructions.**

---

If you have any questions regarding your product or would like to learn more about other Sunbeam™ products, please contact our Consumer Service Department at 1-888-264-9669 or visit our website at [www.sunbeam.ca](http://www.sunbeam.ca).

# WARRANTY INFORMATION

## 1 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period.

Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

### **What are the limits on JCS's Liability?**

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

### **How to Obtain Warranty Service**

#### In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-888-264-9669 and a convenient service center address will be provided to you.

#### In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-888-264-9669 and a convenient service center address will be provided to you.

# WARRANTY INFORMATION

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

© 2012 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Imported and distributed by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, 20B Hereford Street, Brampton, Ontario L6Y 0M1.

Printed in China