 


# Sunbeam<sup>®/MD</sup>

*Instruction Manual* **Digital Steam Iron**

*Notice d'emploi* **Fer numérique à vapeur**

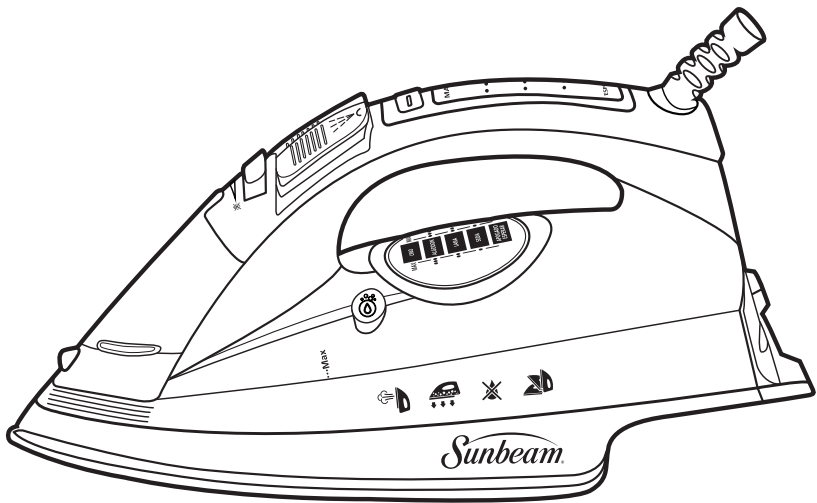

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety instructions should always be followed, including the following:

### READ ALL INSTRUCTIONS BEFORE USE


- READ ALL INSTRUCTIONS, PRODUCT LABELS AND WARNINGS BEFORE USING THE STEAM IRON.
- The steam iron should always be turned to the off "Apagado" position before plugging or unplugging from outlet. Never yank power cord to disconnect from outlet; grasp plug and pull to disconnect.
- Before connecting steam iron, make sure the voltage in your outlet is the same as the voltage indicated on the appliance's rating label. Use it with wall receptacle only.
- To protect against risk of electrical shock, do not immerse the power cord, plug or the steam iron in water or other liquid.
- Never use the steam iron if you have wet hands.
- This appliance should not be used by children.
- Never leave the steam iron unattended while it is turned on or is on top of the ironing board.
- Unplug from outlet while not in use.
- Let steam iron completely cool off in the upright position before storing it. Wind the power cord around the heel rest before storing.
- Burns may occur by touching hot parts, the hot water or the steam. Be careful if you have to turn the steam iron upside down, since there still may be hot water in the reservoir.
- Do not operate Iron with a damaged cord or if the Iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Take it to the nearest Authorized Sunbeam® Service Center for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Do not use it outdoors.
- Do not let the power cord come in contact with hot surfaces.
- This steam iron is intended for household use only.
- Use the steam iron only for the purpose intended.
- Do not leave steam iron unattended while using it. Be careful; if you leave the steam iron unattended, always turn it off, disconnect the unit from the electric outlet and set the iron in an upright position.
- Only trained personnel may carry out repairs to the appliance. As a result of incorrect repairs considerable dangers for the user may result. Please contact the nearest Authorized Sunbeam® Service Center in the event of repairs being necessary.
- Always disconnect the steam iron from the wall electrical outlet when filling it with water or emptying it out.
- Avoid overfilling the reservoir. Never fill it above the maximum water level.
- In order to avoid overloading the circuits, never use another appliance with high wattage on the same circuit.
- The manufacturer is not liable for any damages, which are caused by using the appliance incorrectly or for any other purpose than that intended.
- If an extension cord is absolutely necessary, a cord with the same amperage or higher than that of your iron should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- Close supervision is necessary when any appliance is used by or near children, or incapacitated individuals.

**THIS UNIT IS FOR HOUSEHOLD USE ONLY.**

# SAVE THESE INSTRUCTIONS

## DESCRIPTION OF THE APPLIANCE

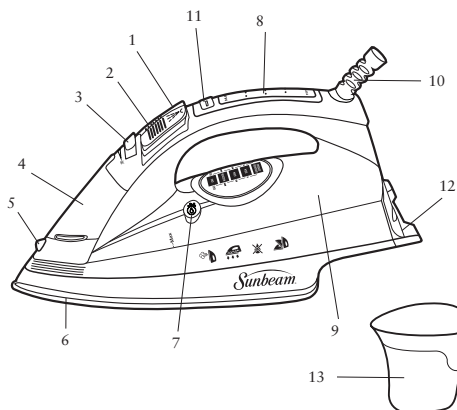

1. Dual Shot of Steam Button
2. Spray Mist™ Button
3. Steam Select Switch
4. Water Reservoir Lid
5. Spray Nozzle
6. Soleplate:  
Ionic Tourmaline Non-Stick finish
7. Self Clean Button
8. LED Temperature Display
9. See Through Water Reservoir
10. 360° Swivel Cord
11. Digital Temperature Control Buttons
12. Wide Heel Rest
13. Water cup

## PREPARING FOR FIRST TIME USE

- When using the iron for the first time, test it on a piece of old cloth to be sure that the soleplate and the water reservoir are clean.
- It is possible that the iron will discharge some smoke or give off a slight odor during its first usage. This is due to the initial heating of the materials used. This is completely normal and will stop shortly afterwards.
- When not ironing, always have the steam select switch turned to the closed position.

## USING YOUR APPLIANCE

Set the steam iron in an upright position and insert the plug into the wall electrical outlet.

1. The blue LED temperature display will turn on and it will remain on for as long as the iron is plugged in.
2. Select the desired temperature using the digital temperature control up and down buttons.
3. The blue LED temperature display light will indicate the selected temperature setting and will stay solid on. Once the iron reaches the selected temperature the light at the temperature display will start blinking. The light will go from solid on to blinking and back to solid on from time to time while you are ironing since the thermostat automatically maintains the soleplate at the same temperature.

Another important feature of your steam iron is the 360° swivel cord, which prevents tangling and allows for easy use by both right and left handed people.

## DRY IRONING

1. Insert the plug in the electrical wall outlet.
2. Make sure the steam select switch is in the closed position.
3. Select the digital temperature up and down buttons.
4. Follow instructions from section "Using Your Appliance".
5. Start dry ironing.

# STEAM IRONING


## Choosing the Right Water

This steam iron may be used with normal tap water. However, if the water of the region in which you live is especially hard, it is recommended to use distilled water to prolong the life of your iron.

Do not use water that has been desalinated with chemicals.

## Filling with Water

1. Turn off the iron and disconnect the plug from the electrical wall outlet before filling the iron with water.
2. Turn the steam select switch to the closed position.
3. Set iron in the position indicated below (figure 2) and fill it with water, no higher than the Max fill level shown on see-through water window.

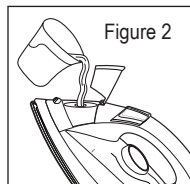


## Steaming

Steam ironing is only possible at high temperatures (“●●●”, “●●●●”), as indicated on LED temperature display.

Be sure there is enough water in the reservoir.

Follow the instructions from the section “Using Steam Your Iron” for your iron model.

Set the steam select switch to the desired steam level position (figure 3). You are now ready to start steam ironing. The steam will be released evenly through vents located in the soleplate for easier ironing.

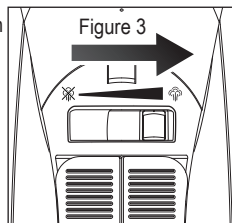

## SPRAY MIST™

The spray mist™ feature is a powerful water spray mist that dampens the fabric to help remove wrinkles from heavy fabrics and to set creases.

Press the spray mist™ button firmly to start the spray.

## DUAL SHOT OF STEAM

This feature allows you to use shot of steam while ironing horizontally or vertically, as the next two sections describe.

## SHOT OF STEAM®

The shot of steam® feature provides an extra burst of steam for deep penetration of stubborn wrinkles. The shot of steam® feature can be used with dry or steam ironing provided it has at least a 1/4 tank of water and the temperature control dial is set within the steam band.

1. Allow the iron to heat for approximately two minutes.
2. Press the shot of steam® button several times to prime the pump.
3. Press the shot of steam® button another three to four times in order to clean the unit.
4. The shot of steam® feature is now ready for use. The shot of steam® feature can be used continuously with just a short pause between shots. The shot of steam feature is most effective with the Iron held in a horizontal position just above the fabric being ironed.
5. If water reservoir runs dry, unplug iron and refill with water. Iron may be filled with water while hot.  
**NOTE:** It may be necessary to re-prime pump before using shot of steam® feature again.

## VERTICAL SHOT OF STEAM

Vertical shot steam feature allows your iron to function as a garment steamer.

**TIP:** When using vertical shot of steam on clothing, hang clothing on a clothes hanger for best results. Hanging curtains and drapes may also be steamed.

## How to use Vertical Steam:

1. Allow iron to warm up (2 minutes).
2. Hold iron in a vertical position, with iron close to but not touching fabric you want to steam.
3. With your other hand, pull fabric tight.
4. Press shot of steam button in approximately 3-second intervals as you move iron across wrinkled area.

**WARNING:** To prevent risk of burns, keep your hand away from area being steamed.

**WARNING:** DO NOT steam garments while wearing them; this may result in injuries.

## IRONING TEMPERATURE


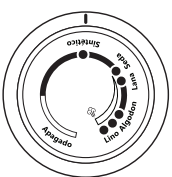
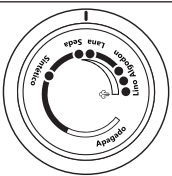
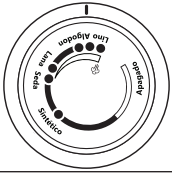

Check ironing instructions on label of item that you wish to iron. Check temperature settings table for further instructions.

Should specific ironing instructions not appear on label, follow instructions on temperature settings table. This table is only valid for fabrics indicated and does not apply to special textiles with a gloss finish, etc. Textiles with special coatings (such as gloss, relief wrinkles, etc.) are best ironed at very low temperatures. If textile consists of several different types of fibers, always select lowest temperature, i.e. temperature recommended for most delicate fiber in composition (for example, if composition consists of 60% polyester and 40% cotton, you should iron at temperature indicated for polyester).

## SETTING TEMPERATURE

1. Set iron in an upright position.
2. Connect iron to an electrical wall socket.
3. Set temperature control up and down buttons to the correct ironing temperature as indicated on label or temperature settings table.

## TEMPERATURE SETTINGS TABLE

Temperature Control Dial		Kind of Textile	Fiber Material	
	●	DRY	synthetic	Acrylic, modacryl polypropylene, polyurethane
			synthetic	acetate, triacetate
			synthetic	metalized, cupro, polyamide (nylon), polyester
	●●	STEAM	silk	silk
			wool	wool
			cotton	cotton
	●●●		linen	linen
	on the label means: This article cannot be ironed (e.g. chlorofiber, elastodiene)			

## IONIC TOURMALINE NON-STICK FINISH

- Tourmaline technology infuses the soleplate with semi-precious stones, which produce extra negative ions for better results and protection to the fabrics from heat damage.
- The non-stick Tourmaline coating prevents fabrics and starch residue from sticking to soleplate.
- Provides high glide ability for quick and easy ironing with superior soleplate resistance.

## ANTI-CALC

Anti-calc feature helps prevent build up of mineral deposits in your iron. This prolongs its life and improves iron's performance.

## ANTI-DRIP

Produces steam without dripping, spitting, or leaking through soleplate, even at low temperatures.

## 3 WAY AUTO-OFF FEATURE

When iron is plugged in, the stand by indicator will light steadily, indicating that there is power to the iron.

### If You Leave Iron:

In a horizontal position without moving it, or accidentally tip iron over, it will automatically stop heating after 30 seconds (+/- 5 seconds). The stand by indicator light will start blinking.

In a vertical position (on its heel rest) without moving it, iron will automatically go into stand by mode after 15 minutes (+/- 1 minute). The stand by indicator light will start blinking.

If someone moves iron, it will reset and start heating up again to be used.

**IMPORTANT:** Indicator light will continue to blink until unplugged or reset.

### To reset iron:

Move iron back and forth and allow it to reheat for 2 minutes. Indicator will stop blinking and stay solid on and iron will start heating again.

**WARNING:** The 3 way auto-off is a safety feature, not a recommended means for turning your iron off.



## CARE AND CLEANING

Before cleaning the iron, always make sure that it is disconnected from electrical wall socket and is completely cool.

## SOLEPLATE

- Residue on soleplate can be wiped off with a cloth soaked in a solution of water and vinegar.
- Do not use scouring pads, abrasives or chemical cleaning solvents as they may damage finish.

## HOUSING

- Housing can be cleaned with a moist cloth and then wiped dry.
- Other than the recommended cleaning, no further user maintenance should be necessary. If for any reason your steam iron should require repairs, do not try to fix it yourself. Take it to nearest Authorized Sunbeam® Service Center.

## SELF-CLEANING FEATURE

You should use the self-cleaning feature to maintain optimal performance of your iron. Self-cleaning feature will clean water reservoir and steam vents of accumulated minerals, dust and lint.

1. Move steam control back and forth several times to remove debris and minerals from steam valve. This keeps water flowing into steam chamber.
2. Fill water reservoir with tap water to "MAX" line.
3. Plug in iron and move temperature control up and down buttons to the "●●●" position, and allow iron to heat for two minutes.
4. Unplug iron.
5. Hold iron over a sink in a horizontal position.  
**WARNING:** Be careful not to touch iron's hot surfaces.
6. Press the self-clean button and hold. Water will begin dripping from steam vents. Slowly rock iron side-to-side and front to back for 30 seconds. When rocking iron, dip nose of iron slightly below rear to make certain water circulates completely.
7. Turn iron upside down and allow remaining water to flow out of the fill hole.
8. Dry the soleplate with a towel.
9. Plug in iron and turn temperature control up and down buttons to the "●●●" position. Let iron heat for two minutes and dry out iron completely.
10. Turn temperature control up and down buttons to off "Apagado" position. The light will go out, indicating that the iron has turned itself off. Unplug iron and allow it to cool before storing.

## STORING YOUR APPLIANCE

1. Turn off iron and disconnect plug from wall electrical outlet.
2. Set iron in an upright position and let it cool down completely.
3. Set steam select switch to closed position.
4. Empty out all water remaining in water reservoir by opening its lid and inverting iron over sink.
5. Power cord can be wound around heel rest for easier and tidy storing once unit has cooled down. Iron should always be stored in an upright position.

## 3 YEAR LIMITED WARRANTY AND LIFETIME LIMITED SOLEPLATE WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of three years from the date of initial retail purchase, this product will be free from defects in material and workmanship. JCS warrants the iron's soleplate will be free from defects in material and workmanship for the life of the iron from the date of initial retail purchase.

JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, commercial use, accident, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes. Soleplate warranty does not cover scratches or discoloration of the soleplate finish and only applies as long as the iron generates optimal heat.

### What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

### How to Obtain Warranty Service

#### In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.458.8407 and a convenient service center address will be provided to you.

#### In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.667.8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.



**PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

**For product questions visit us online at [www.sunbeam.ca](http://www.sunbeam.ca) or call 1.800.667.8623.**





For product questions:  
Sunbeam Consumer Service  
USA : 1.800.458.8407  
Canada : 1.800.667.8623

©2014 Sunbeam Products, Inc., doing business as Jarden Consumer Solutions. All rights reserved. In the U.S., distributed by Sunbeam Products, Inc., doing business as Jarden Consumer Solutions, Boca Raton, FL 33431. In Canada, imported and distributed by Sunbeam Corporation (Canada), Limited, doing business as Jarden Consumer Solutions, Brampton, ON L6Y 0M1.

Pour toutes questions concernant le produit:  
Service à la clientèle de Sunbeam  
Canada : 1 800 667.8623  
États-Unis : 1.800.458.8407

©2014 Sunbeam Products, Inc., faisant affaire sous le nom de Jarden Consumer Solutions. Tous droits réservés. Aux États-Unis, distribué par Sunbeam Products, Inc., faisant affaire sous le nom de Jarden Consumer Solutions, Boca Raton, FL 33431. Au Canada, importé et distribué par Sunbeam Corporation (Canada), Limited, faisant affaire sous le nom de Jarden Consumer Solutions, Brampton (ON) L6Y 0M1.

Visit [www.sunbeam.ca](http://www.sunbeam.ca) for an Ironing Guide and Ironing Tips

Vous trouverez le guide et les conseils de repassage au [www.sunbeam.ca](http://www.sunbeam.ca)

For inquiries regarding recycling and proper disposal of this product, please contact your local waste management facility.

Pour toute demande de renseignements en ce qui concerne le recyclage et l'élimination appropriée de ce produit, veuillez communiquer avec l'installation de gestion des déchets locale.