

# **Steam Iron**



# Owner's Guide READ AND SAVE THESE INSTRUCTIONS

www.sunbeam.ca P.N. 151427

## **IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety instructions should always be followed, including the following:

## READ ALL INSTRUCTIONS BEFORE USING THE STEAM IRON.

- 1. The Iron should always be turned to the "OFF" position before plugging or unplugging from outlet. Never yank Cord to disconnect from outlet; grasp Plug and pull to disconnect.
- Before connecting the Steam Iron, make sure the voltage in your outlet is the same as the voltage indicated on the appliance's rating label. Use it with wall receptacle only.
- 3. To protect against risk of electrical shock, do not immerse the Power Cord, plug or the Steam Iron in water or other liquid.
- 4. Never use the Steam Iron if you have wet hands.
- 5. This appliance should not be used by children.
- Never leave the Steam Iron unattended while it is turned on or is on top of the ironing board.
- 7. Unplug from outlet while not in use.
- 8. Let Steam Iron completely cool off in the upright position before storing it. Wind the Power Cord around the Heel Rest before storing.
- Burns may occur by touching hot parts, the hot water or the steam. Be careful if you have to turn the Steam Iron upside down, since there still may be hot water in the Reservoir.
- 10. Do not operate Iron with a damaged cord or if the Iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the Iron. Take it to an Authorized Sunbeam® Service Center for examination and repair. Incorrect reassembly can cause a risk of electric shock when the Iron is used.
- 11. Do not use it outdoors.
- 12. Do not let the Power Cord come in contact with hot surfaces.
- 13. This Steam Iron is intended for household use only.
- 14. Use the Steam Iron only for the purpose intended.
- 15. Do not leave Steam Iron unattended while using it. Be careful; if you leave the Steam Iron unattended, always turn it off, disconnect the unit from the electric outlet and set the Iron in an upright position.


## IMPORTANT SAFEGUARDS CONT.

- 16. Repairs to the appliance may only be carried out by trained personnel. As a result of incorrect repairs considerable dangers for the user may result. Please contact an Authorized Sunbeam® Service Center in the event of repairs being necessary.
- 17. Always disconnect the Steam Iron from the wall socket when filling it with water or emptying it.
- Avoid overfilling the Reservoir. Never fill it above the maximum water level.
- 19. In order to avoid overloading the circuits, never use another appliance with high wattage on the same circuit.
- 20. The manufacturer is not liable for any damages, which are caused by using the appliance incorrectly or for any other purpose than that intended.
- 21. If an extension cord is absolutely necessary, a cord with the same amperage or higher than that of your iron should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
- 22. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 23. Close supervision is necessary when any appliance is used by or near children, or incapacitated individuals.

## **SAVE THESE INSTRUCTIONS**

## (For 120 & 127 volts with two flat pins only)

To reduce the risk of electrical shock, this appliance has a polarized plug (one blade is wider than the other). This plug fits a polarized outlet only one way. This is a safety feature intended to help reduce the risk of electrical shock. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

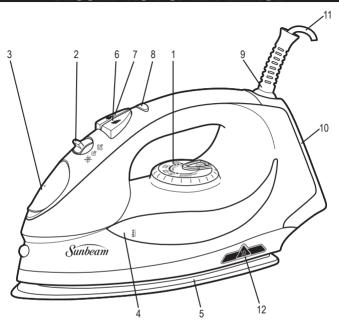

- Temperature Control Dial
   Steam Select Switch

- 3. Water Reservoir Lid 4. See Through Water Window 5. Soleplate non-stick finish on models 5806 & 5809
- 6. Spray Mist Button

- 7. Shot of Steam® Button/ Dual Shot of Steam® Button
- 8. Indicator Light 9. 180° Swivel Cord
- 10.Wide Heel Rest
- 11.Power Cord
- 12. Safe Storage Indicator

## **BEFORE FIRST USE**

- When using the Iron for the first time, test it on a piece of old cloth to be sure that the Soleplate and the Water Reservoir are clean.
- It is possible that the Iron will discharge some smoke or give off a slight odor during its first usage. This is due to the initial heating of the materials used. This is completely normal and will stop shortly afterwards.
- When not ironing, always have the Steam Select Switch turned to the closed position x.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

## INSTRUCTIONS FOR USE


#### **USING THE STEAM IRON**

- Set the Steam Iron in an upright position and insert the plug into the wall electrical outlet.
- Select the desired temperature on the Temperature Control Dial.
- The Indicator Light will go on and once the selected temperature is reached, the light will go off and you can begin to Iron. The Indicator Light will be on every time the Iron is heating. Once it reaches the temperature setting, the Indicator Light will turn off. The Light will turn on and off from time to time while you are ironing since the thermostat automatically maintains the Soleplate at the same temperature.
- The Large Soleplate increases ironing efficiency while the non-stick finish makes gliding across fabrics even smoother.
- Another important feature of your Steam Iron is the 180° Swivel Cord, which prevents tangling and allows for easy use by both right and left handed people.

#### **CHOOSING THE RIGHT WATER**

- This Steam Iron may be used with normal tap water. However, if the water of the region in which you live is especially hard, it is recommended to use distilled water to prolong the life of your Iron.
- Do not use water that has been desalinated with chemicals.

- Turn off the Iron and disconnect the plug from the electrical wall outlet before filling the Iron with water.
- Turn the Steam Select Switch to the closed position X.
- Set the Iron in the position indicated below (figure 2) and fill it with water, no higher than the Max fill level shown on the See Through Water Window.

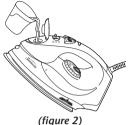

- Insert the plug in the electrical wall socket.
- Select the desired temperature on the Temperature Control Dial.
- After the Indicator Light goes off, you may start to iron.

- Steam ironing is only possible at high temperatures ("● ●", "● ●"), as indicated on the Temperature Control Dial.
- Be sure that there is enough water in the Reservoir.
- Set the iron in an upright position.
- Plug the steam Iron into the wall electrical outlet.
- Turn the Temperature Control Dial to the desired position within the range of temperatures included in the steam area of the dial.
- Wait until the Indicator Light has turned off after lighting up.
- Set the Steam Select Switch to the desired steam level position (figure 3). You are now ready to start steam ironing. The steam will be released evenly through vents located in the soleplate for easier ironina.



(figure 3)

## **SPRAY MIST W**

- The Spray Mist feature is a powerful water spray mist that dampens the fabric to help remove wrinkles from heavy fabrics and to set creases.
- Press the Spray Mist button firmly to start the spray.

## **DUAL SHOT OF STEAM® P**

This feature allows you to use Shot of Steam® while ironing horizontally or vertically, as the next two sections describe.

## SHOT OF STEAM® TO

- The Shot of Steam® feature provides an extra burst of steam for deep penetration of stubborn wrinkles. The Shot of Steam® feature can be used with dry or steam ironing provided it has at least a ¼ tank of water and the Temperature Control Dial is set within the steam band.
- Allow the iron to heat for approximately two minutes.
- Press the Shot of Steam® Button several times to prime the pump.
- Press the Shot of Steam® Button another three to four times in order to clean the unit.
- The Shot of Steam® feature is now ready for use. The Shot of Steam® feature can be used continuously with just a short pause between shots.
   The Shot of Steam® feature is most effective with the Iron held in a horizontal position just above the fabric being ironed.
- If the Water Reservoir runs dry, unplug the Iron and refill with water. The Iron may be filled with water while it is hot. Note: It may be necessary to re-prime the pump before using the Shot of Steam® feature again.

# **VERTICAL SHOT OF STEAM® P**

The vertical Shot of Steam® feature allows your iron to function as a garment steamer. **Tip:** When using the vertical Shot of Steam® on clothing, hang the clothing on a clothes hanger for best results. Hanging curtains and drapes may also be steamed.

#### How to use Vertical Steam:

- 1. Allow iron to warm up (2 minutes).
- 2. Hold the iron in a vertical position, with the iron close to but not touching the fabric you want to steam.
- 3. With your other hand, pull the fabric tight.
- Press the Shot of Steam® button in approximately 3-second intervals as you move the iron across the wrinkled area.

**WARNING:** To prevent the risk of burns, keep your hand away from the area being steamed.

**WARNING:** DO NOT steam garments while wearing them; this may result in injuries.

## SETTING THE TEMPERATURE

- Set the Iron in an upright position.
- Connect the Iron to an electrical wall socket.
- Set the Temperature Control Dial (figure 4) to the correct ironing temperature as indicated on the label or the temperature settings table.



## TEMPERATURE SETTINGS TABLE

Temperature Control Dial		ŵ	Kind of Textile	Fiber Material
150 A			synthetic	Acrylic, modacryl polypropylene, polyurethane
		DRY	synthetic	acetate, triacetate
		٥	synthetic	metalized, cupro, polyamide (nylon), polyester
			silk	silk
	••	<b>V</b>	wool	wool
		STEAM	cotton	cotton
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	•••	.S	linen	linen
1-/2				



on the label means: This article cannot be ironed (e.g. chlorofiber, elastodiene)

## NON-STICK FINISH

- The non-stick coating prevents fabrics and starch residue from sticking to the Soleplate.
- Avoid all contact of the Soleplate with metal objects.
   Note: Scratches in the non-stick Soleplate do not affect the performance of the Iron.

## ANTI-CALC 祭

The anti-calc feature helps prevent the build up of mineral deposits in your iron. This prolongs its life and improves the iron's performance.

## TIMED AUTO SHUT-OFF (Model 5809 Only)

When the iron is plugged in and turned on, the power indicator will light steadily, indicating there is power to the iron. Once the selected temperature is reached, the light will go off and you can begin to Iron.

A 45-minute timer will start once the unit has been plugged in. After 45 minutes, the iron will beep 6 times indicating it will automatically shut-off. To reset the iron:

Unplug the iron and then put it back into the wall outlet. This will restart the timer for the auto shut-off feature.

**WARNING:** The timed auto shut-off is a safety feature, not a recommended means for turning your iron off. See the "Storing the Iron" section for information on turning off your iron and storing it safely between uses.

## MAINTENANCE AND CLEANING

 Before cleaning the Iron, always make sure that it is disconnected from the electrical wall socket and is completely cool.

#### **SOLEPLATE**

- Residue on the Soleplate can be wiped off with a cloth soaked in a solution of water and vinegar.
- Do not use scouring pads, abrasives or chemical cleaning solvents as they may damage the finish.

#### HOUSING

The housing can be cleaned with a moist cloth and then wiped dry.
 Other than the recommended cleaning, no further user maintenance should be necessary. If for any reason your Steam Iron should require repairs, do not try to fix it yourself. Send it to an Sunbeam® Authorized Service Center.

## STORING THE IRON

- Your Sunbeam® Steam Iron includes a Safe Storage Indicator which changes from red to black when the iron is ready for safe storage.
- Turn off the iron and disconnect the plug from the electrical wall socket.
- Set the Iron in an upright position and let it cool down completely.
- Set the Steam Select Switch to the closed position.
- Empty out all the water remaining in the Water Reservoir by opening the Water Reservoir Lid and inverting the Iron over the sink.
- The Power Cord can be wound around the Heel Rest for easier and tidy storing once the unit has cooled down. The Iron should always be stored in an upright position.

# NOTES

## 1 Year Limited Warranty

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use ormisuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

#### What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claimbrought against purchaser by any other party. Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

## How to Obtain Warranty Service In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-458-8407 and a convenient service center address will be provided to you.

#### In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-667-8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problemor claimin connection with this product, please write our Consumer Service Department.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.



For product questions contact: Sunbeam Consumer Service Canada: 1-800-667-8623 USA: 1-800-458-8407

#### www.sunbeam.ca

©2012 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions.

All rights reserved. Imported and distributed by Sunbeam Corporation (Canada)

Limited, doing business as Jarden Consumer Solutions,

20 B Hereford Street, Brampton, Ontario L6Y 0M1.

Printed in China.