

# Sunbeam™/MC

*User Manual* **COMPACT TOASTER OVEN**  
*Notice d'emploi* **MINI-FOUR GRILL COMPACT**

MODEL/MODÈLE  
**TSSBTVVG1**



# IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:**

## **READ ALL INSTRUCTIONS BEFORE USING THE TOASTER OVEN.**

1. **DO NOT** touch hot surfaces. ⚠ Surfaces are liable to get hot during use. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Allow the unit to cool thoroughly before putting in or taking off parts.
2. When unit is not in use and before cleaning, unplug it from the wall outlet. Note: Make sure the oven is turned off before unplugging.
3. To protect against risk of electrical shock, do not immerse the appliance in water or any other liquids.
4. **DO NOT** operate this or any appliance with a frayed or damaged cord or plug or after the appliance malfunctions or is dropped or has been damaged in any manner. Take the toaster oven to the nearest Authorized Service Center for examination, repair or electrical or mechanical adjustment. Incorrect assembly may cause personal injuries.
5. **DO NOT** use attachments not recommended by the manufacturer; they may cause fire, electric shock or personal injury.
6. **DO NOT** use outdoors or for commercial purposes.
7. **DO NOT** use this appliance for other than its intended use.
8. **DO NOT** let the cord dangle over the edge of a tabletop or countertop or touch hot surfaces.
9. **DO NOT** place the appliance near a hot gas or electric burner or in a heated oven.
10. Extreme caution should be used when using containers constructed of material other than metal or heat resistant glass.
11. A fire may occur if the toaster oven is covered or touching flammable materials, including curtains, draperies, walls, etc., when in operation. Do not store any items on top of the appliance when in operation.
12. When using toaster oven, pull the unit out a minimum of 15 cm (6 inches) away from the wall or other cords.
13. **DO NOT** store any materials, other than manufacturer's recommended accessories, in this unit when not in use.
14. **DO NOT** place any flammable materials in oven, such as paper, cardboard, plastic or any materials that may catch fire or melt.
15. **DO NOT** cover the oven or oven parts with metal foil. This will cause overheating of the appliance.
16. Oversized foods or metal utensils must not be inserted in the appliance as they may create a fire or risk of electrical shock.
17. To disconnect, turn any control to the off position "O" then remove plug from wall outlet.
18. Extreme caution must be used when moving appliance containing hot liquids.
19. **DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electrical shock.
20. Use extreme caution when removing tray or disposing of hot grease.
21. To turn this appliance off, return all controls to the "O" position.
22. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
23. Close supervision is necessary when any appliance is used by or near children, or incapacitated individuals.

# THIS UNIT IS FOR HOUSEHOLD USE ONLY

## SHORT POWER SUPPLY CORD INSTRUCTIONS

 
A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the electrical rating of the cord must be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

**(For 120 volts with two flat pins only)** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT MODIFY THE PLUG IN ANY WAY.**

## SAVE THESE INSTRUCTIONS

### DESCRIPTION OF THE APPLIANCE

- |                                     |                    |
|-------------------------------------|--------------------|
| 1. Temperature Control Dial         | 5. Stay-On Setting |
| 2. Toast Setting                    | 6. Indicator Light |
| 3. Broil Setting                    | 7. Baking Pan      |
| 4. Toast Color Control / Timer Dial | 8. Crumb Tray      |

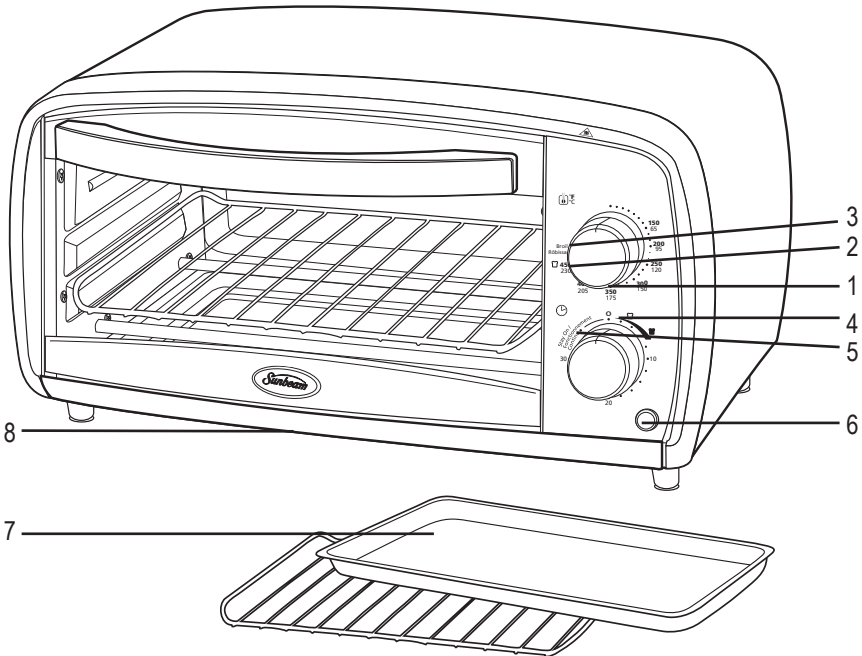

# LEARNING ABOUT YOUR TOASTER OVEN

1. **Removable Wire Rack** – To accommodate a wide variety of foods.
2. **Temperature Selector/Function Selector Knob** – Adjust the thermostat dial to the desired temperature. Select cooking function by turning knob to desired setting. (See Figure 1)
3. **Timer Selector Knob** – Allows to adjust the dial to the desired time for up to 30 minutes. Oven will automatically shut off when cooking is completed. (See Figure 2)
4. **Power Light** – Indicates that oven is plugged in and that the timer is set to begin warming.
5. **Removable Crumb Tray** – For crumb or fallen food particles collection. Pulls out for easy cleaning.
6. **Glass Door** – Allows you to see food while is cooking.
7. **Easy Clean Interior Walls** – Allows for easy cleaning.
8. **Baking Pan and Broiling Rack** – Use for all your baking, broiling and grilling needs.

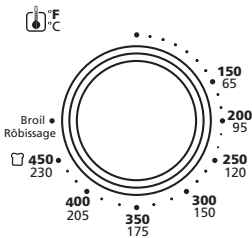 


Figure 1

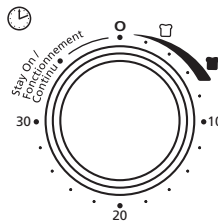 


Figure 2

## PREPARING THE TOASTER OVEN FOR USE

### OPERATING INSTRUCTIONS

#### PREPARING TO USE YOUR TOASTER OVEN FOR THE FIRST TIME:

If you are using your toaster oven for the first time, please be sure to:

1. Remove any stickers from the surface of the oven. Open oven door and remove all printed documents and paper from inside the toaster oven.
2. Clean the rack, tray, and pan with hot water, a small amount of dishwashing liquid and a nonabrasive sponge or cleaning pad. Insert rack.

#### **NOTE: DO NOT IMMERSER THE BODY OF THE UNIT IN WATER.**

Dry the unit thoroughly before using. Select a location for the toaster oven. The location should be in an open area on a flat counter where the plug will reach an outlet. Plug the toaster oven into an electrical outlet.

**Warning:** When toaster oven is in use or cooling down, please be sure there is a 15 cm (6-inch) clearance between the toaster oven and any other surface including cords. Be sure the cord is not resting against the back of the toaster oven.

**PLEASE NOTE** – It is recommended that the toaster oven heat at 450° for approximately 15 minutes to eliminate any manufacturing residue that may remain after shipping.

# OPERATING INSTRUCTIONS

Your Sunbeam™ Toaster Oven/Broiler is equipped with all the options of a full-size oven in a countertop appliance; toasts, bakes and broils.

**NOTE:** During initial start up you may detect a slight smell and/or smoke. Turn the temperature to max and let run for approximately 5 minutes.

## PREHEATING THE OVEN

1. Place oven rack into the desired position before heating the oven.  
(See “Positioning Rack” Section)
2. Turn the temperature control knob to the desired temperature.
3. Turn the function selector knob to the desired setting.
4. Set the timer knob to desired time and allow 7 – 9 minutes for the oven to preheat.

## TO USE THE TOAST FUNCTION

1. Place oven rack in Broil/Toast position. Place food on rack.
2. Turn function knob to Toast.
3. Rotate Toast Color Control/Timer Dial clockwise past 10 minutes then back to desired toast shade.

**IMPORTANT:** When choosing Toast color light, medium (set between light and dark) and dark, always rotate timer over 10 minutes and then rotate back to Dark, Medium or Light. This will ensure that the timer operates correctly and safely. When the toast cycle is finished the bell will ring and the electrical power is automatically turned off. To stop the cycle at any time, turn the timer counterclockwise to the “Off” position and the bell will ring. In this cycle both the top and bottom heating elements operate, however they may not glow red-hot. Please note this is normal and they are operating properly.

## TO USE THE BAKE FUNCTION

1. Place the food on the baking pan and then place the pan on the top of the Wire Rack in the oven. Close the oven door.

**NOTE:** We suggest to always preheat the oven at this “Baking” setting before placing the food inside.

2. Rotate the Temperature Dial to the desired temperature.
3. The Timer Dial is the On/Off Switch.
4. After rotating the Temperature Dial to your desired temperature, then you must select from the following options on the Timer Dial.

For items requiring shorter baking times, rotate the Timer Dial clockwise (up to 30 min). At the sound of the bell, the bake function will automatically turn “Off.”

For longer baking times, rotate the Timer Dial counterclockwise to the “Stay On” setting. Baking will continue until the Timer Dial is manually turned to the “Off” position and the bell will sound.

During this cycle, both the top and bottom heating elements operate. **NOTE:** Always monitor the food at this setting to ensure that you are not overcooking. Do not use oven plastic or paper cooking bags in the toaster oven.

## TO USE THE BROIL FUNCTION

1. Place the food on the baking pan and then place the pan on the top of the wire rack in the oven.
  2. Close the door to the first notch, leaving approximately a 3-inch gap at the top. This will insure adequate airflow during broiling.
  3. Rotate the Temperature Dial clockwise to the "Broil" position.
  4. The Timer Dial is the On/Off switch. After rotating the Temperature Dial to the "Broil" position, select the Timer Dial with the following options.
  5. When broiling is completed, open door fully and remove food carefully with oven mitt.
- For items requiring short broil times, rotate the Timer Dial clockwise (up to 30 minutes). At the sound of the bell, the broil function will automatically turn "Off."

For longer broiling times, rotate the Timer Dial counterclockwise to the "Stay On" setting. The broiling will continue until the Timer Dial is manually turned to the "Off" position and the bell will sound. In this cycle only the upper heating elements operate, however they may not glow red-hot. Please note this is normal and they are operating properly.

**NOTE:** Always monitor the food at this setting to ensure that you are not overcooking. We suggest using the Timer as food can burn quickly at this setting. When broiling, turn food over for even cooking. Food should not be placed directly on the wire rack. For Top Browning simply broil as long as desired.

**NOTE:** Do not preheat; Do not allow aluminum foil to touch heating elements. Allow one inch between heating element and food.

## POSITIONING RACK

To accommodate a wide variety of foods the oven has two rack positions. The rack can be inserted in the oven in the up position or down position. The rack will fit into either of the rack guides inside of the oven. (See Figure 3)

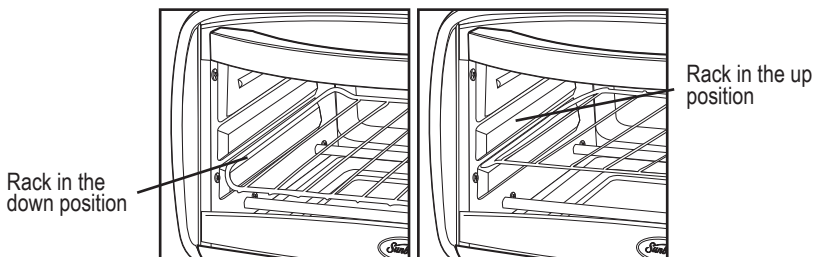 


Figure 3

Before removing the rack allow the unit to cool.

To remove the rack, open the oven door and pull the rack towards the front of the oven.

Positioning of the rack will depend on the size of the food and desired browning.

## CLEANING YOUR TOASTER OVEN

Before cleaning your Sunbeam™ Toaster Oven, unplug it and allow it to cool. To clean, wipe with damp cloth. **DO NOT IMMERSE IN WATER!** Make sure to use only mild, soapy water. Abrasive cleaners, scrubbing brushes and chemical cleaners will damage the continuous clean coating on this unit. Empty crumb tray frequently to avoid accumulation of crumbs. Oven racks are dishwasher safe (top of dishwasher only). Other than the recommended cleaning, no further user maintenance should be necessary.

## CLEANING THE WIRE RACK

The wire rack can be removed for easy cleaning. Open the oven door and tilt upward slightly, pull the wire rack toward you until it slides out completely. Once the rack is removed, clean the interior with a damp cloth. To replace the wire rack, open the oven door and tilt upward slightly and slide the rack into the two rack grooves at either side of the oven chamber, push straight to the back of the oven chamber. Ensure that the automatic door hooks are in the correct position to push in the wire rack towards the rear of the oven chamber. The exterior may be wiped with a damp cloth. Remember; do not place the entire unit in water or any liquid. **DO NOT WIPE THE HEATING ELEMENTS** – They are self-cleaning.

## CLEANING THE BOTTOM OF THE CRUMB TRAY

This appliance has a removable interior crumb tray at the bottom of the baking chamber.

First, unplug this appliance and allow cooling. To clean out the crumbs, simply lift the crumb tray and pull out of the Toaster Oven/Broiler.

DO NOT use the dishwasher to clean any of the accessories, which are included with these products.

DO NOT use any abrasive cleaning products. TO PREVENT COUNTERTOP FROM BEING DAMAGED, THE TOASTER OVEN/BROILER MUST BE OPERATED WITH THE CRUMB TRAY IN PLACE AND CLEANED OF EXCESS FOOD. NEVER OPERATE YOUR TOASTER OVEN/BROILER WITH THE OVEN DOOR OPEN.

## STORING YOUR TOASTER OVEN

Allow the appliance to cool completely before storing. If storing the oven for long periods of time make certain that it is clean and free of food particles. Store the oven in a dry location such as on a table or countertop or cupboard shelf.

## HELPFUL TIPS/ TROUBLESHOOTING

| PROBLEM   | POTENTIAL CAUSE   | SOLUTION   |
|---|---|--|
| <ul style="list-style-type: none"> <li>• Overcooked / undercooked foods.</li> </ul>         | <ul style="list-style-type: none"> <li>• Incorrect temperature or time setting.</li> <br/> <li>• Rack placement.</li> </ul>       | <ul style="list-style-type: none"> <li>• You may have to adjust the time and temperature to the desired taste.</li> <li>• Because your oven is smaller than your regular oven, it will heat up faster and generally cook in shorter periods of time.</li> <li>• Refer to “Positioning Rack” Section. Rack may need to be adjusted to accommodate food type.</li> </ul> |
| <ul style="list-style-type: none"> <li>• Burnt smell.</li> </ul>                            | <ul style="list-style-type: none"> <li>• Food build-up inside oven, on heating elements or in crumb tray.</li> </ul>              | <ul style="list-style-type: none"> <li>• Refer to “Cleaning Your Toaster Oven” Section.</li> </ul>   |
| <ul style="list-style-type: none"> <li>• Oven does not turn ON.</li> </ul>                  | <ul style="list-style-type: none"> <li>• Unit is unplugged.</li> <br/> <li>• Timer was not turned past 10 minute mark.</li> </ul> | <ul style="list-style-type: none"> <li>• Plug the toaster oven into appropriate electrical outlet.</li> <li>• Set timer knob and temperature knob to the desired setting. Both must be turned on to operate the toaster oven.</li> </ul>   |
| <ul style="list-style-type: none"> <li>• Only one heating element is heating up.</li> </ul> | <ul style="list-style-type: none"> <li>• Function setting selection determines which heating element will operate.</li> </ul>     | <ul style="list-style-type: none"> <li>• When toasting, make sure the oven is not set to broil setting.</li> </ul>   |
| <ul style="list-style-type: none"> <li>• Heating elements do not stay ON.</li> </ul>        | <ul style="list-style-type: none"> <li>• Heating elements will cycle ON and OFF to maintain proper heat.</li> </ul>               | <ul style="list-style-type: none"> <li>• Be certain that function is as desired.</li> </ul>  |



# 1 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

## **What are the limits on JCS's Liability?**

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

## **How to Obtain Warranty Service**

### In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-458-8407 and a convenient service center address will be provided to you.

### In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-667-8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.