

Sunbeam[®]

ELECTRIC KETTLE

Model BVSBKT1703 Series

User
Manual



QUESTIONS? COMMENTS? IN CANADA: 1 800 667-8623

P.N. 174662 Rev.A

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. **Read all instructions before using.**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, **do not immerse this appliance including power base in water or any other liquid.**
4. Close adult supervision is necessary when this appliance is used by or near children.
5. Unplug the power base cord from the power outlet when not in use, before repositioning and before cleaning. **Allow to cool before cleaning the appliance.**
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return this appliance to the nearest authorized service center for examination, repair or adjustment.
7. The use of accessory attachments not recommended by Sunbeam may cause hazards or injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place this appliance on or near a hot gas or electric burner or in a heated oven.
11. Ensure that the kettle is properly located on the power base before switching on.
12. Remove the kettle from power base before filling or pouring. Do not attempt to remove the kettle from the power base until it is switched off, manually or automatically.
13. Use the kettle only with the power base supplied and vice-versa.
14. Do not use appliance for other than intended use.
15. Use on a hard, flat level surface only, to avoid interruption of air flow underneath the appliance.
16. **Extreme caution must be used when handling or moving kettle and pouring from kettle containing boiling water.**
17. **Scalding may occur if the lid is removed during the heating cycle.**

IMPORTANT SAFEGUARDS (Cont.)

18. A short power supply cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
19. An extension cord may be purchased and used if care is exercised in its use.
20. If an extension cord is used the marked electrical rating of the extension cord must be at least 15 amps and 120 volts. The resulting extended cord must be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over accidentally.

*** This appliance has a grounded 3-prong electrical plug. It must be plugged only into a properly grounded 3-prong outlet. Do not modify the plug in any way.**

SAVE THESE INSTRUCTIONS

PRECAUTIONS:

WARNING: TO AVOID SCALDING, handle this kettle with care as water is heating, boiling, and cooling. The lid must remain in place during use to avoid steam burns. Keep spout away from persons as scalding can result from steam.

1. Place the electric kettle well back from the edge of the counter.
2. This kettle is intended for boiling WATER ONLY. Do not heat any other liquid or attempt to cook any food in this appliance.
3. Hand wash only.
4. Do not exceed the “Max” water level mark when filling. Overfilling could cause hot water to boil out of the spout.
5. Do not hold the switch on as this may damage the auto shut-off mechanism.
6. Hold top of lid when pouring from the electric kettle.
7. Carry or move electric kettle by handle only.
8. Kettle body may get very hot, be careful when handling.
9. Do not immerse the kettle or power base in water or any other liquid.

FOR HOUSEHOLD USE ONLY

Introduction

Table of Contents	Page #
Important Safeguards	1 – 2
Precautions	2
Introduction	3
Diagram of Parts	3
Clean Your Electric Kettle Before First Use	4
Using Your Cordless Electric Kettle	4
Filter Removal/Cleaning/Refitting	5
Care and Cleaning	6
Limited Warranty	7

Diagram of parts



Clean your electric kettle before first use

1. Wash the inside of the kettle and lid with mild detergent and water. Rinse each thoroughly. Do not immerse the kettle or power base in water or any other liquid. **These items are not dishwasher safe.**
2. Fill the electric kettle with fresh water to the “MAX” water level mark on water window. Boil the water, following the directions below for use of your specific kettle.
3. When the water and unit have cooled, discard the water. Rinse with cold water and repeat.
4. Your electric kettle is now ready for use.

Using your Cordless Electric Kettle

1. Position the power base on a flat, heat resistant surface, as close as possible to a power outlet.
2. Follow cord routing in power base according to exit patterns. Proper cord routing will result in the power base laying flat when kettle is placed in base. DO not operate kettle if power base is not flat. Remove kettle from power base and repeat cord placement instructions.
3. To fill with water, open the lid. Fill the kettle with water up to the “MAX” water level mark. **NOTE: Do not exceed the “MAX” water level mark indicated on the water window.**
4. Plug the electric cord into an electric outlet. Turn the switch ON by pushing up on the on/off switch. The on/off light will light to indicate the unit is on. The water will heat and the electric kettle will switch off automatically when the water has boiled. **NOTE: Ensure the ON/OFF switch is clear of obstructions and the lid is firmly closed. The electric kettle will not turn off automatically if the ON/OFF switch is constrained, or if the lid is left open.**
5. Carefully lift the kettle from the power base and pour the boiling water.

 
NOTE: The kettle will not re-boil until the on/off switch is again switched ON. Wait 15-20 seconds, allowing kettle to cool down, then switch ON.

Filter removal/cleaning/refitting


use

Important: The kettle must be switched off, disconnected from the power outlet and allowed to cool down completely prior to removing or refitting the filter. Do not use excessive force, as this might damage the filter or the lid.


1. Empty the kettle and open lid.
2. Hold lid open with one hand and grip the top part of the filter with index finger and thumb. **Caution:** Keep fingers clear of mesh. Pressing into mesh may damage filter.
3. To remove filter simply pull upwards. This will disengage the filter from its guides (see illustration).
4. To clean the filter, rinse under a tap while brushing it gently with a soft brush.
5. To refit filter, once again hold lid open with one hand and filter with index finger and thumb. Gently push filter back into the kettle until it fits snugly in its guides. Be sure to fit the bottom tab of the filter snugly in the center guide. This will center the filter in the spout, ensuring a good fit. Once the tab is in the front guide push the filter forward to snap it into place.
6. Rinse out kettle with fresh water and it's ready for use.

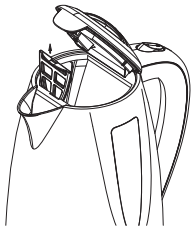

Remove

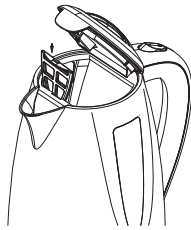 

Refit

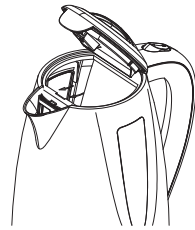 

Care and cleaning of your electric kettle

1. Mineral deposits in tap water may cause scale deposits to form inside the electric kettle after frequent use. To remove this scale build-up, fill the kettle with a solution of 1 cup of white vinegar and 1 cup water. Let sit overnight.
2. Empty the vinegar solution from the kettle. Remove any stain remaining inside by rubbing with a damp cloth.
3. Fill the kettle with clean water. Place kettle on power base and bring to a boil, then discard water. Repeat and the kettle will be ready to use.
4. The kettle will not operate again until the on/off switch is pressed upward.
5. Always remove kettle from power base and disconnect power base from electrical outlet before cleaning. Do not immerse kettle or power base in water or any other liquid.
6. The outside of the electric kettle can be wiped with a soft damp cloth.

NOTE: Never use any chemical, steel wool, or abrasive cleaners to clean any part of the kettle, including the power base.

One Year Limited Warranty

Sunbeam Products, Inc., or if in Canada, Sunbeam Corporation (Canada) Limited (collectively "Sunbeam") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on Sunbeam's Liability?

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

Sunbeam shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1 800 667-8623 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1 800 667-8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc., located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

Printed in China

©2014 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. In the U.S., distributed by Sunbeam, Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, FL 33431. In Canada, imported and distributed by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, 20 B Hereford Street, Brampton, Ontario L6Y 0M1.

BVSBKT1703 series_14EFM2

GCDS-SUN34913-ZZ

P.N. 174662 Rev.A